

Congratulations on The Purchase of A New *ErgoSoft Latex Select Component* Mattress!




Your component mattress includes (one of the configurations below):

- | | |
|---|---|
| <input type="checkbox"/> 1 Organic Cotton Zippered Cover | <input type="checkbox"/> 1 Organic Cotton Zippered Cover |
| <input type="checkbox"/> 1 – 2 ½ inch Organic Wool Filled Pad | <input type="checkbox"/> 2 – 4” ErgoSofft Latex Toppers |
| <input type="checkbox"/> 2 – 3” ErgoSoft Latex Toppers
[One Med-Soft and one Med-Firm,
or two Med-Firm density] | [One Med-Soft and one Med-Firm,
or two Med-Firm density] |

Assembly Instructions:



1. Make sure that all components of your Latex Select Component Mattress have been received.
2. Remove all mattress components from box or boxes and carefully remove the plastic bags.
3. Lay the Organic Cotton Mattress Cover out wherever you are planning to assemble the mattress, and unzip. The zipper should be closer to the bottom. For better control, fold or roll back the upper section of the mattress cover, making sure that the bottom remains evenly in place.

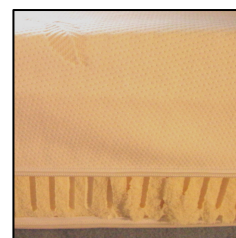

CAUTION

Note that larger pieces of latex foam, in particular, can be awkward and heavy. Handle with care, and get assistance for larger beds. One trick that makes it easier to move and position Latex Toppers is to place them on top of a sheet and roll them up. The sheet ‘sling’ is much easier to hold on to, and will support the full weight of the latex better than a handhold on one small section of the foam itself. **DO NOT FORCIBLY MOVE OR MANIPULATE THE FOAM. DAMAGE CAUSED BY IMPROPER HANDLING IS NOT COVERED UNDER WARRANTY.**

4. Position the more dense piece of Latex Foam on top of the opened cover (bottom section). If the foam extends a little beyond the edges, that is fine as long as the overlap is approximately even on all sides (The overlap will be pressed in when the cover is zipped up, filling in the mattress cover and giving it a cleaner and tighter feel and appearance).
5. Next, position the other piece of Latex Foam – which will be less dense and softer if you have purchased the Med-Soft Component Bed – on top of the first.
6. If your Latex Select Component Mattress includes the Organic Wool Pad, place that on top of the two layers of latex, and stretch the corner straps underneath the layers of latex.
7. Now, lay the TOP of the mattress cover over the components, gently encasing them into the corners of the cover.
8. Carefully zip the Mattress Cover together. As you zip around the mattress, use one hand to gently press the components inside, making it easier to proceed. Please do not force or stretch the zipper, as this could cause it to part or break.
9. We do recommend the use of a removable mattress cover to prevent soiling your new mattress.
10. Enjoy your wonderful new ErgoSoft 100% Natural “Green” Latex Select Component Mattress!

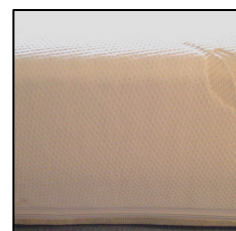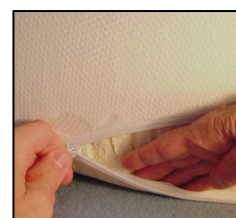

Important Notes

You may notice a slight odor to your new foam product. This “new” smell is normal and will gradually disappear over time; and should be mostly gone within a few weeks. This odor is not toxic; rather it is the smell of natural rubber packaged in the factory before shipping directly to you.

ALTHOUGH WOOL IS NATURALLY FLAME RETARDANT, COTTON AND LATEX FOAM ARE FLAMMABLE. WHEN IGNITED, SUCH MATERIALS WILL BURN, CONSUMING OXYGEN, AND GENERATING HEAT, THICK SMOKE, AND NOXIOUS GASSES. SERIOUS PERSONAL INJURY OR DEATH CAN RESULT FROM IGNITION OF FOAM PRODUCTS IN AN ENCLOSED SPACE. FOR YOUR OWN HEALTH AND SAFETY, DO NOT EXPOSE THESE PRODUCTS TO RADIANT HEAT, OPEN FLAMES, SPACE HEATERS, BURNING OPERATIONS, CIGARETTES, WELDING OPERATIONS, NAKED LIGHTS, MATCHES, ELECTRIC SPARKS OR OTHER IGNITION SOURCES.